
PROGRAMMING INSTRUCTIONS

The remotes and receiver come pre-programmed however these settings can be changed if required by following the below steps. To Remove the code press K1 and release after 10 seconds, the white LED (D1) will flash 5 times, this indicates that original codes have been successfully removed.

To program a new code press K1 for a short period, the white LED (D1) will turn on, press any button on the remote twice, if the white LED (D1) turns off, this indicates that the code has been successfully learnt (D1 will turn off in 8 seconds if there's no code input.). Repeat the above operation to learn more remote controls.

To change from momentary output contacts to constant outputs press both button 1 and 2 on the remote at the same time for 10 seconds. To change back to momentary follow the same procedure.

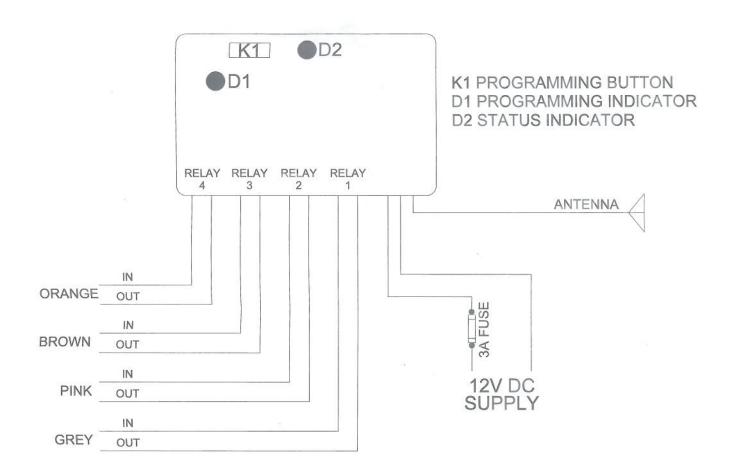



Albany, Auckland N.Z.

Ph: +64 9 415 7261

Fax: +64 9 415 9327

www.bepmarine.com

E-mail: enquiries@bepmarine.com

MASTERVOLT MARINCO